



Sand Fluid Mix

(when drilling any size hole in gravel or ground water, we highly recommend SureFlow)

Short distance x 5" hole and less use PolyRite

Treats 1000 Gallons



Viscosity / Lube


6"- 8" hole use ZanRite-L and PolyRite

Extremely coarse sands, water sands, or gravel? Use SureFlow

Treats 1000 Gallons



Suspension

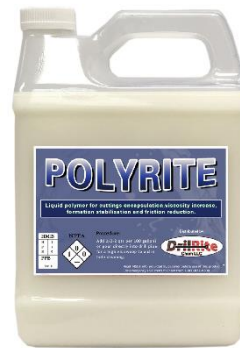

Viscosity / Lube

Treats 1000 Gallons

9" and above hole use bentonite and SureFlow



Viscosity



Viscosity/ Gel / Fluid Loss